

the Juicer

Instruction manual

 **Espressions**



Congratulations on the purchase of your Espressions Juicer. the Juicer has been engineered and designed in The Netherlands and is made in Europe with the greatest care. This combined with advanced technology and functional design, guarantee the performance, that it will surpass expectations.

Espressions is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance.

Listed next are precautions which are essential for the safe use of an electrical appliance:

the Juicer is a product of Espressions B.V. The Netherlands.
For your local distributor or service partner please check at **theJuicer.eu**

Content

Important safety instructions	4
Explanation of safety instructions	5
Product overview	7
First use	8
Re-assembling	10
Juicing	12
Tips for better use	14
Cleaning	15
Maintenance	19
Spare parts	19
Fault finding	20
Technical specifications	21
Environmental safe recycling	21
Terms of guarantee	22

Important safety instructions

Follow all the safety precautions for safety and to reduce the risk of injury or electrical shock.

- Remove the packaging and check if the Juicer is complete.
- Read the user manual carefully and keep it for future reference.
- Check if the voltage of the Juicer indicated at the rating plate under the machine corresponds to the voltage of the mains before using the Juicer.
- The appliance must be connected to an earth socket.
- Never place the Juicer in a room where the temperature can drop to below 0°C/32°F.
- Do not use an extension cable, it may result in fire, electrical shock and/or personal injuries.
- Do not use the Juicer if the cord, plug or the Juicer are damaged, or in an abnormal state. Check regularly.
- Do not use the Juicer if the rotating sieve or the protecting cover is damaged or has visible cracks. Check regularly.
- Make sure the Juicer is placed on a flat and stable surface.
- the Juicer should not be placed in a cabinet when in use.
- Keep the Juicer away from hot surfaces, moisture and sharp edges.
- Do not use the Juicer without checking if the bowl, cover, cone and press cap are properly fitted in position.
- Avoid any direct contact with the moving and rotating parts while in use.
- Do not use the Juicer when the cover is not placed over the sieve.
- Only use the Juicer for squeezing citrus fruits and pomegranates.
- Do not use an appliance for any purpose other than its intended use.
- the Juicer is intended for domestic use and similar applications such as: bed and breakfast, farm houses and by consumers in hotels, motels and other residential type environment. Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never leave an appliance unattended while in use.

- Keep the Juicer and its cord out of reach of children younger than 8 years old.
- Remove the plug when the appliance is not in use and before cleaning.
- Make sure the motor stops completely before disassembling. Unplug after each use.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- To disconnect the Juicer, wait until motor stops, then take out the plug from the mains.
- Remove by grasping the plug – do not pull on the cord.
- the Juicer should not be cleaned by a flow of water.
- The motor base must never be immersed in water.
- Do not use strong detergents or aggressive cleaners.
- Replacement of the power cord may only be carried out by an authorized service technician.

Explanation of safety instructions



INFO

Provides important information.




WARNING

Indicates a hazardous situation which, if not avoided, could result in fatal or serious injury.




ssions


Product overview

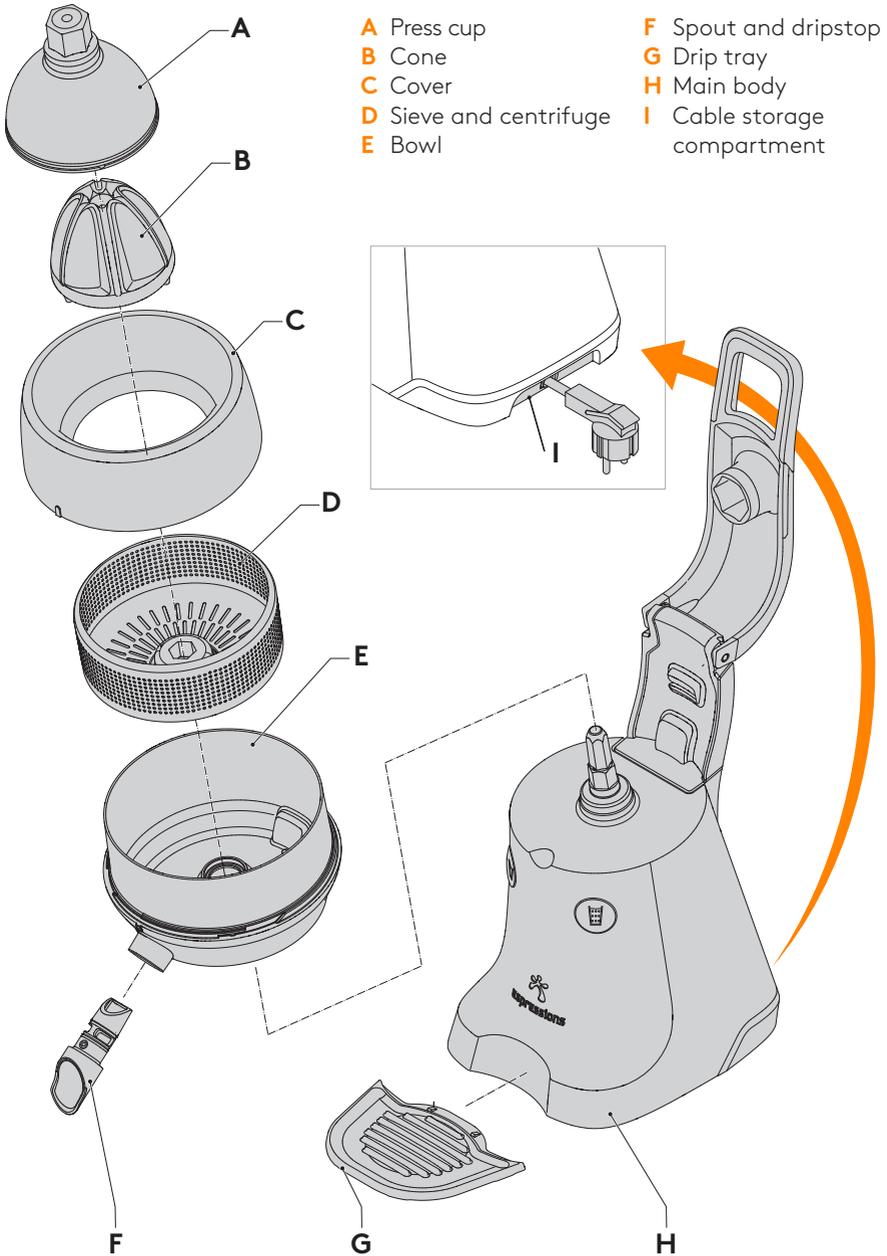


First use

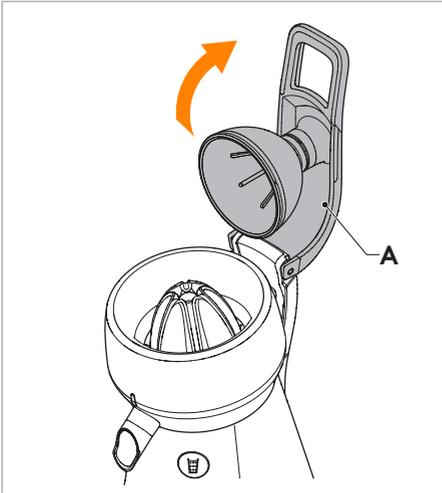


1. Take the Juicer out of the packaging and push the lever (A) up.

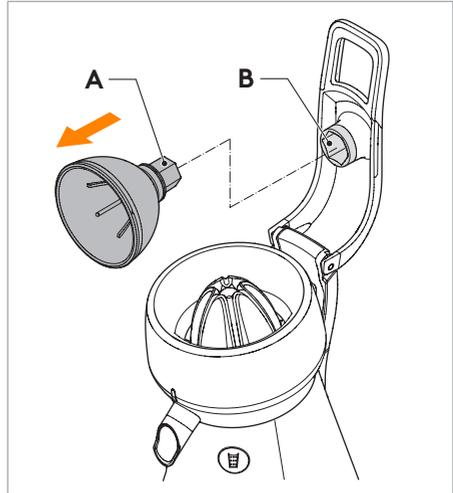

2. Remove the press cup (A) from the lever (B).

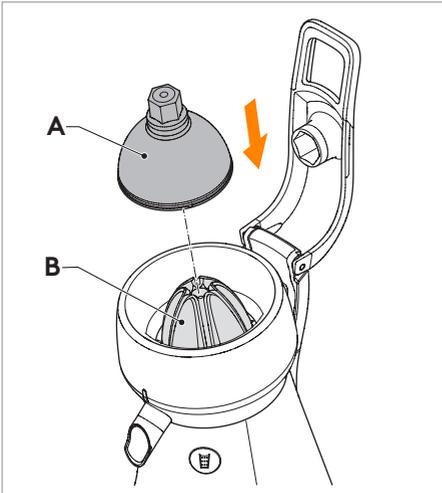


3. Place the press cup (A) on the cone (B).

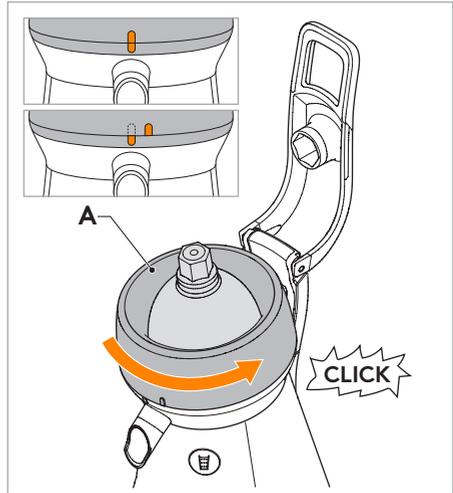


4. Turn the cover (A) counter clockwise until it clicks open to remove. See the marks at the front of the cover.

First use

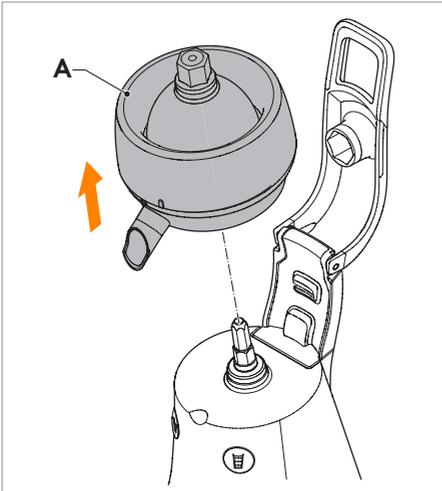


5. Take out the bowl assembly (A).

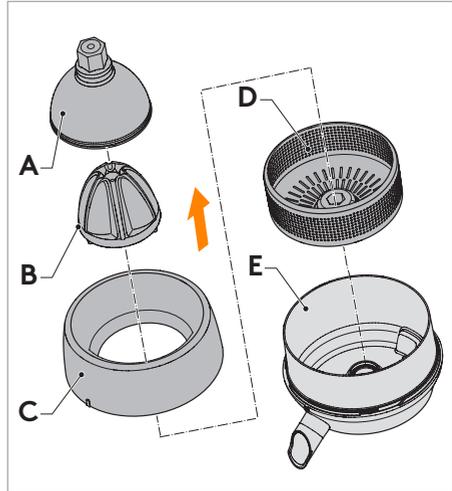

6. Remove all parts from the bowl assembly.

- | | |
|--------------------|------------------------|
| A Press cup | D Sieve |
| B Cone | E Bowl assembly |
| C Cover | |

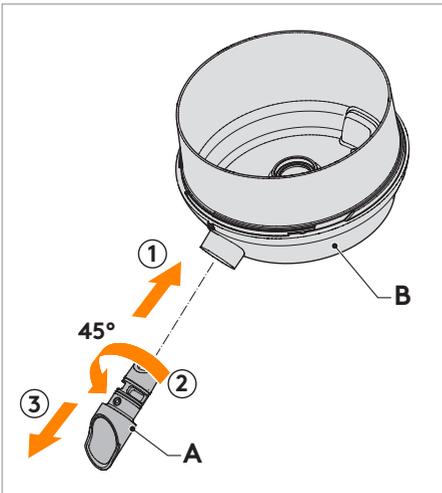


7. Remove the spout (A) from the bowl (B) by pushing it in (1) and then turning it counterclockwise (2) approx. 45° and pull it out (3).




8. Remove all protection and packaging.
9. Rinse all removed parts carefully before first use.


Re-assembling

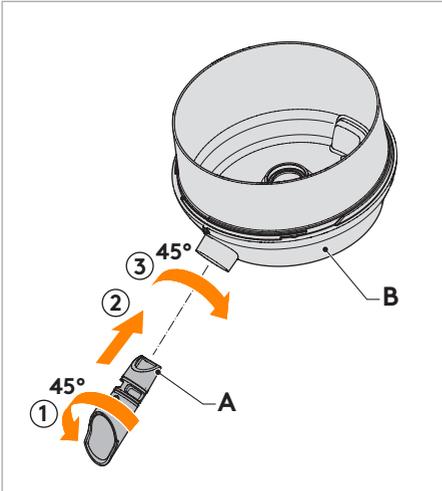


10. Position the spout (A) 45° counterclockwise (1) on the bowl (B), push in (2) and turn 45° clockwise (3) to lock.

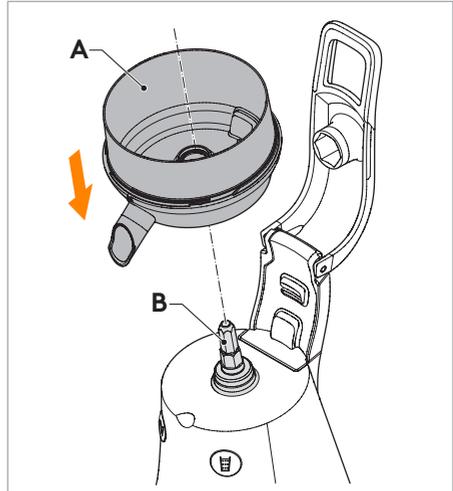

11. Place the bowl assembly (A) on the main body (B).

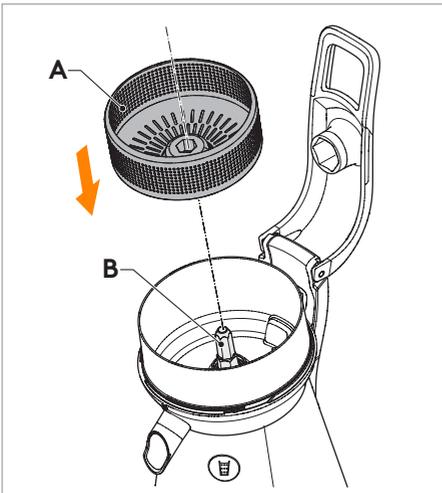


12. Place the sieve (A) on the main body.

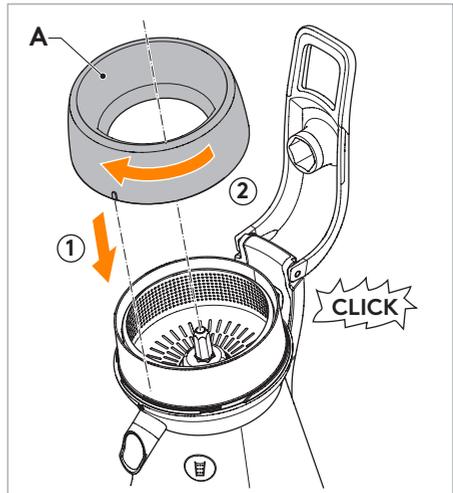


13. Place the cover (A) at bowl in the position it was removed. Turn clockwise and align the marks at cover and bowl until it clicks.


Re-assembling

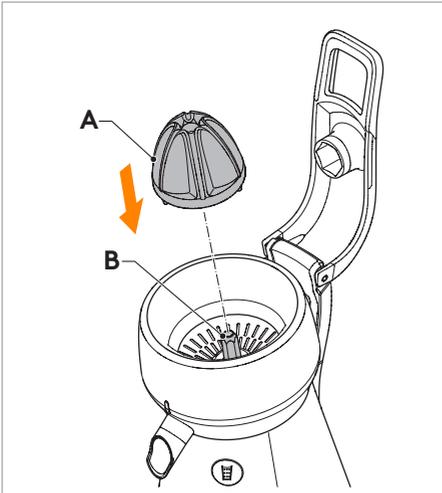

14. Place the cone (A) at the shaft (B).

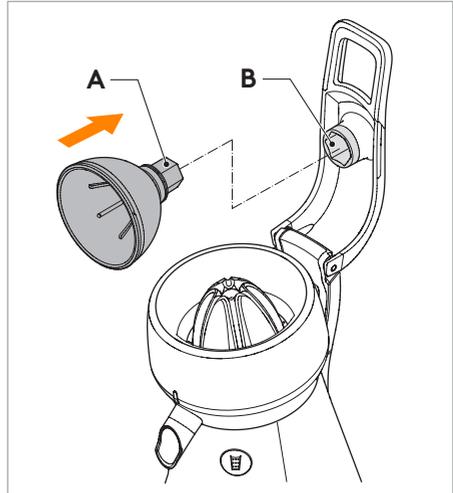

15. Place the press cup (A) into position on the lever (B).

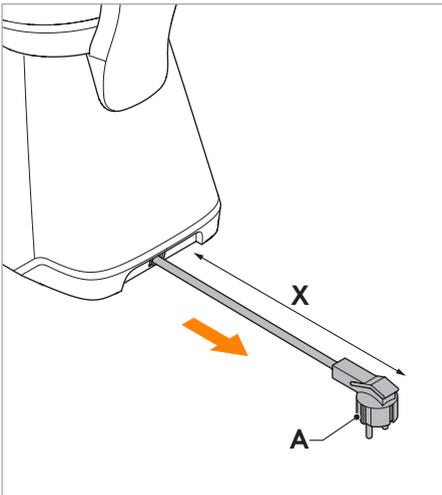


16. Take out the power cable (A) at the desired length (X).

Juicing


i Always select a button A (clear juice) or B (fibre rich juice). The chosen button will illuminate and the Juicer is ready for use. If not selected, both buttons will start flashing alternately and the Juicer will not operate.

After 5 minutes of intensive/continuous use let the juicer cool down for at least five minutes to prevent overheating of the motor.


Clean the Juicer and its parts right after use to prevent remains of juice or pulp to dry.

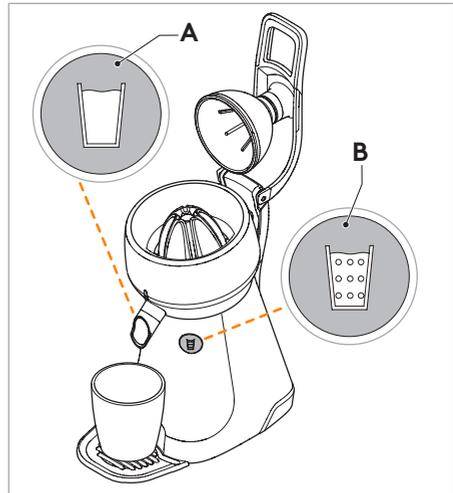

1. Place a glass or jug at the drip tray.
2. Cut the fruit into two halves.
3. Select a juice option.
Left button (A): Clear juice
Right button (B): Fibre rich juice

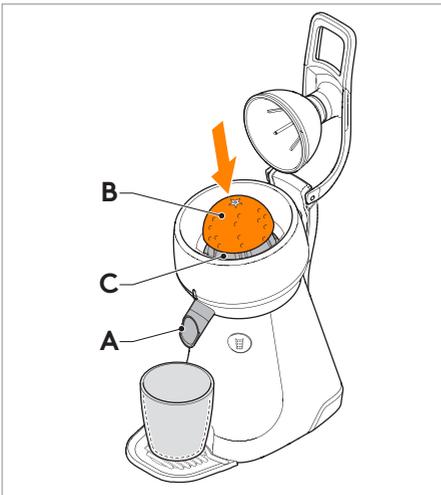


4. Make sure the spout (A) is pushed in (open).
5. Position the half-fruit (B) at the cone (C).

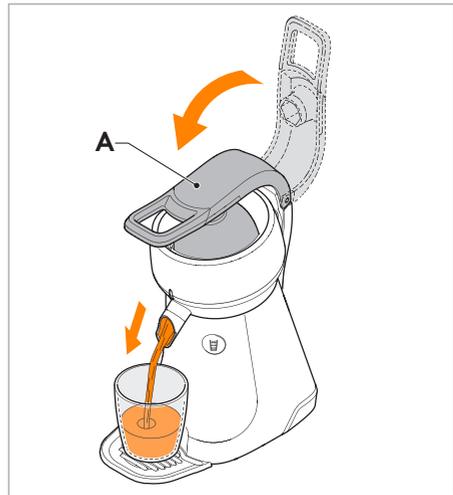


6. Press the lever (A). No force is needed. The cone starts rotating.

Juicing

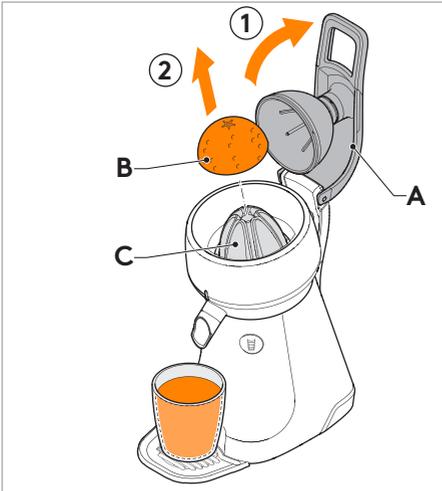


7. Lift the Lever (A). Remove the fruit (B) from the cone (C).

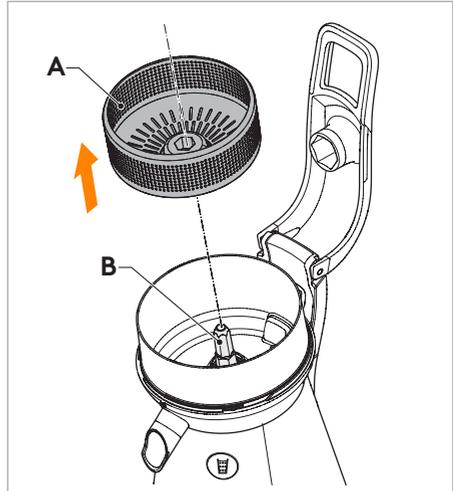


8. Clean sieve and bowl in time to prevent overflowing;

- If the centrifuge gets full of residues
- If the centrifuge gets unbalanced (starts shaking)
- If the juice flow gets slower

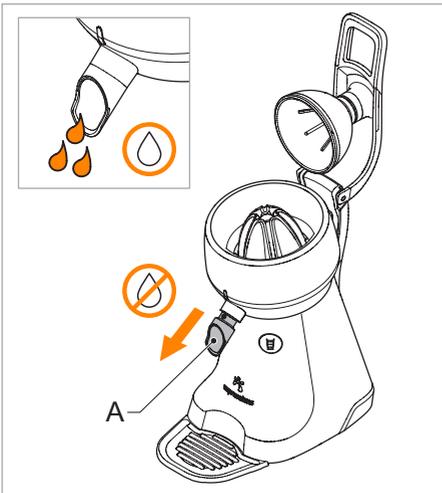

9. After use: pull out the spout (A) to activate the drip stop.

10. Before use: push in the spout to continue.

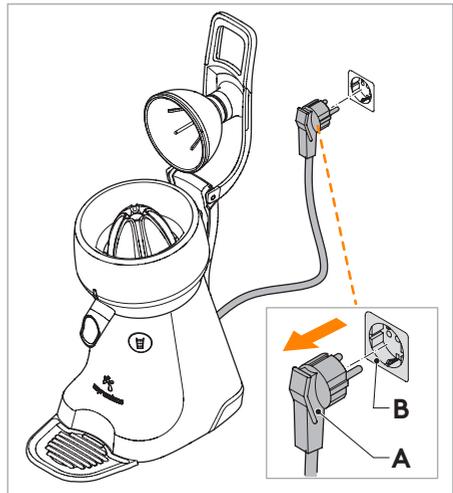

11. Turn off by pulling the main plug (A) from the main socket (B) when finished.

Tips for better use

Cleaning tips

- When using the Juicer at nature stone surfaces carefully rinse these after juicing. Citrus juice can cause spots at these surfaces.
- Rinse the parts with water after every use promptly. Dry remains are difficult to remove.
- If the Juicer starts shaking during operation, empty and clean the centrifuge.
- If the bowl parts and /or drip stop slide heavily we recommend to use a food safe lubricant for easy (dis-)assembly'.

Tips for the best juicing results

- Position the citrus fruit straight at the cone.
- Use fresh press oranges.
- Don't use force to press.

Healthy tip

- Mix or blend fresh orange juice with fresh or frozen fruits for an energizing smoothie.
- Combine orange juice with fresh lemon or grapefruit juice.
- the Juicer is also suitable for juicing pomegranates at the Fibre Rich Juice function (B).
- Combine fresh orange juice with butter milk for an energizing and refreshing drink.

Cleaning



Important


- Turn the power off and remove the plug when the Juicer is not in use and before cleaning.
- the Juicer should not be cleaned by a flow of water.
- The motor base must never be immersed in water.




Clean the Juicer and its parts right after use to prevent remains of juice or pulp to dry.

Except for the cone we advise to hand wash the removable parts. The dish-washer will cause wear not being covered by warranty. White haze at the cone and inside of the press cup can be easily removed with some soda and warm water.


The cone is made of dishwasher safe stainless steel.

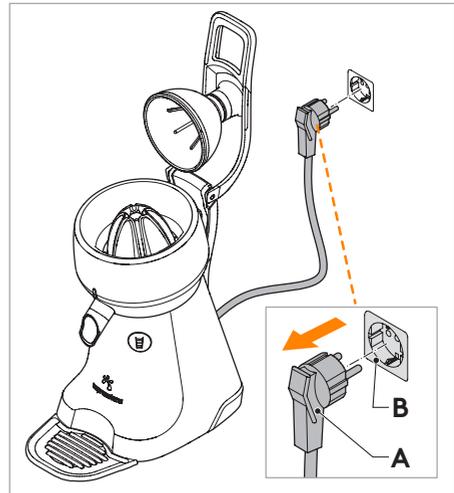

1. Unplug the main plug from the main socket.

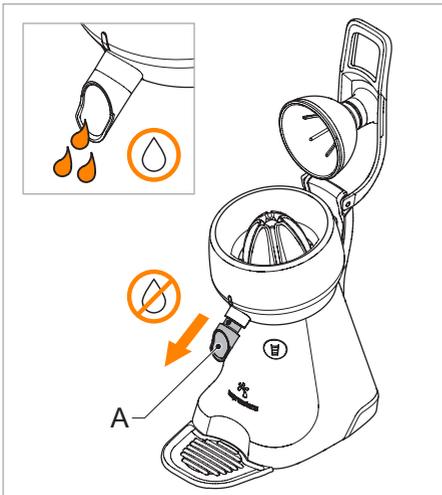


2. Pull out the spout (A) to activate the drip stop.

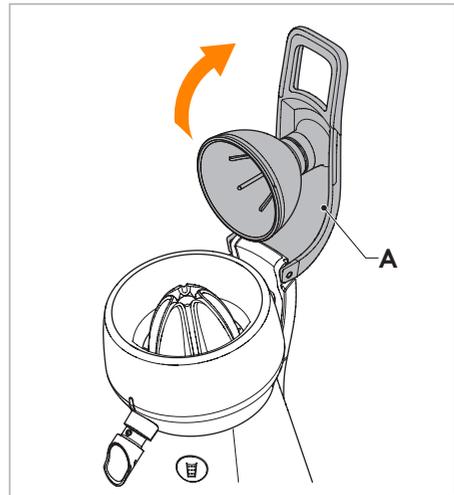


3. Push the lever (A) up.


Cleaning

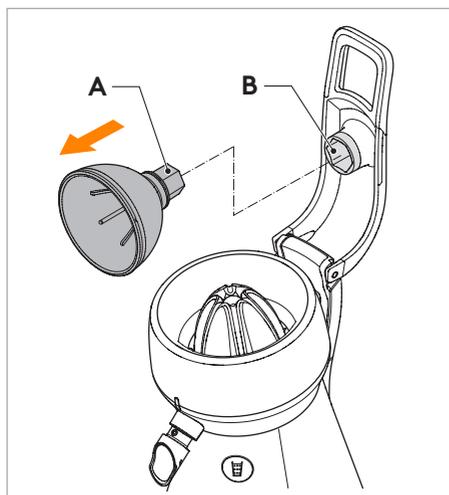


4. Remove the press cup (A) from the lever (B).

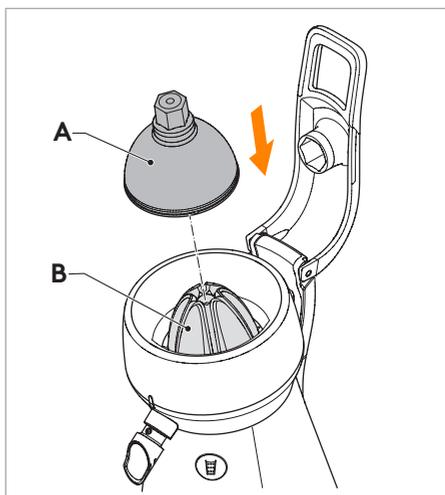

5. Place the press cup (A) on the cone (B).

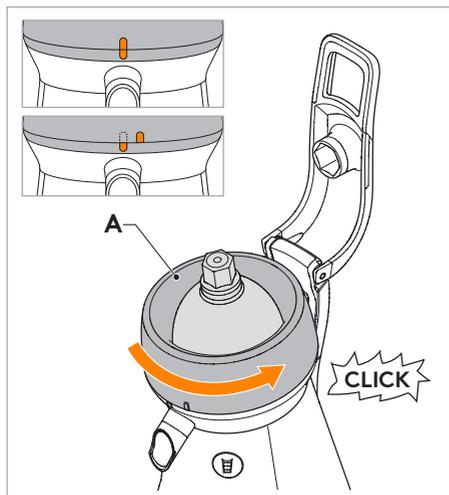


6. Turn the cover (A) counterclockwise to disengage until the bowl clicks loose.

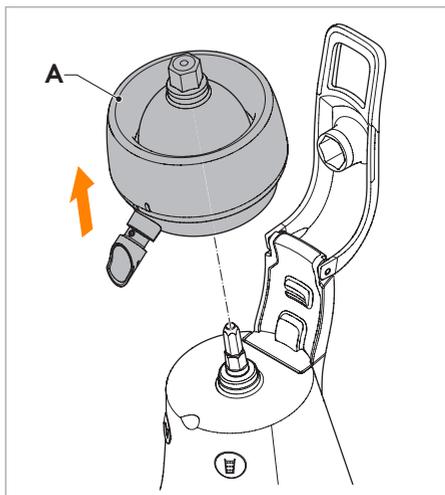


7. Lift the complete bowl assembly (A) as shown.


Cleaning

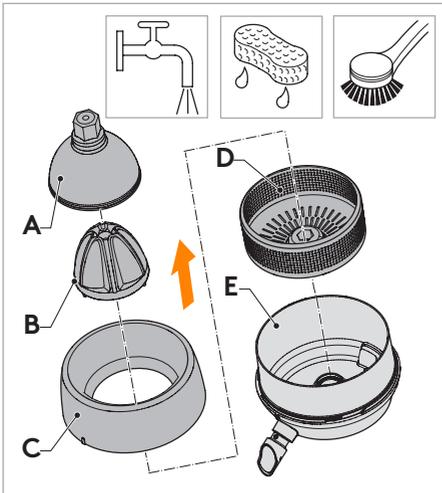

8. Remove the press cup (A), the cone (B), the cover (C), the sieve (D) from the bowl (E). Rinse all parts under running water.

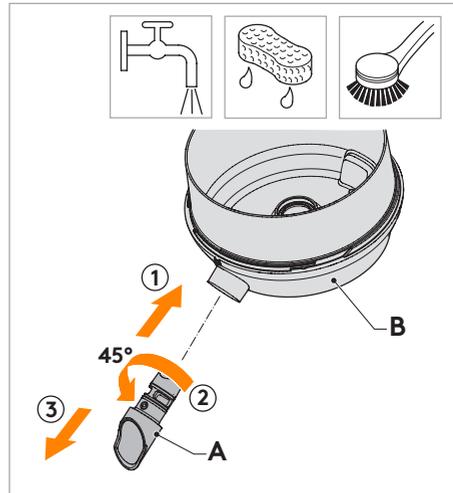


9. Remove the spout (A) by pushing it in (1) and then turning it 45° counterclockwise (2) and pull it out (3). Rinse the spout (A) and the bowl (B) under running water.

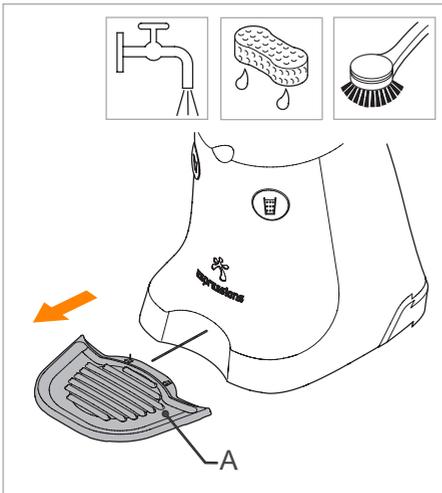


10. Remove drip tray (A) and rinse it under running water.

11. Make sure to clean the parts through with a soft sponge or soft brush.

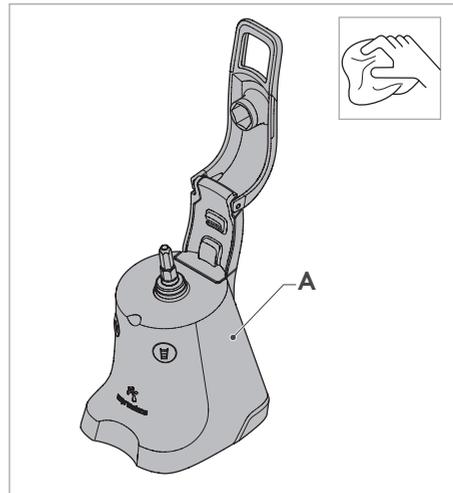


12. Wipe clean the body (A) with a damp cloth. Dry and polish carefully with a soft cloth.

Cleaning

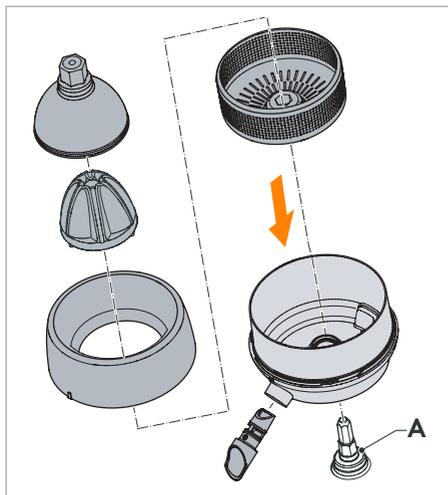

13. Re-assemble the juicer in reverse order.
- Make sure that all parts are properly aligned on the shaft (A).

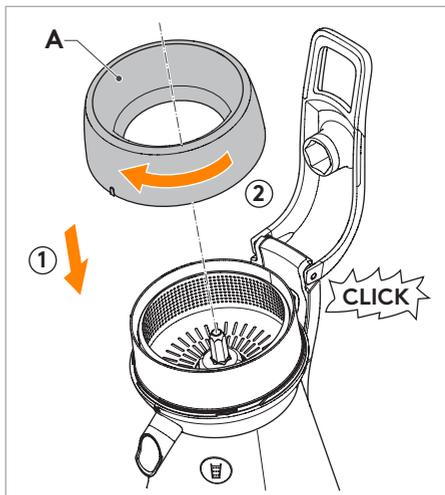

14. To switch on the juicer, make sure to turn the cover (A) clockwise and align with the mark at the front of the bowl, until it clicks.

Maintenance


Before any maintenance always take out the plug first.

Spare parts

Use of spare parts other than certified original Espressions parts is prohibited. The Juicer requires no specific maintenance other than cleaning after every use. Only use original parts when replaced according to the below spare part list and exploded view.

For all spare part orders (see references in the exploded view), state:

- The type
- The machine serial number
- The electrical specifications recorded under the machine.

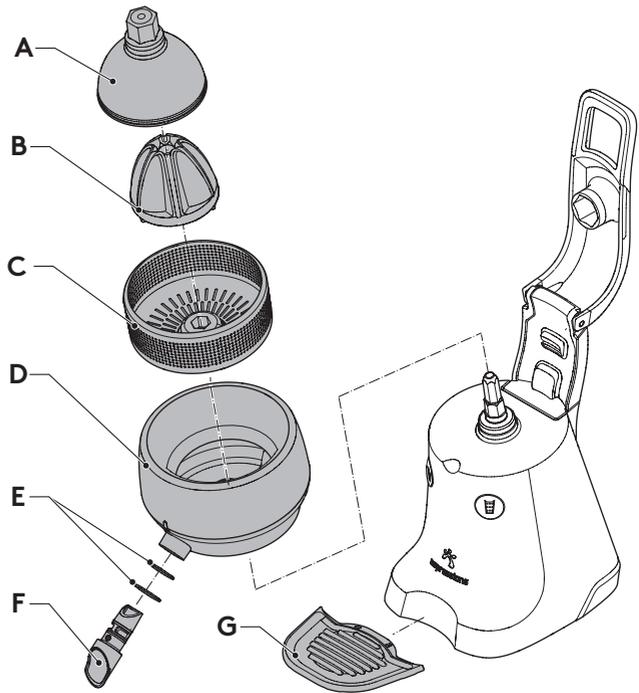

Pos.	Article number	Description
A	EPJ10	Press cup
B	EPJ11	Cone
C	EPJ12	Sieve
D	EPJ13	Bowl set
E	EPJ14	Spout seal
F	EPJ15	Spout
G	EPJ16	Drip tray

Fault finding

First identify exactly why the machine stopped:

Issue	Cause	Solution
the Juicer will not start and the button LED does not light.	The main plug is not properly connected to the mains or the power cable is damaged.	Connect the main plug properly or bring to an authorised Espressions service centre for replacing the power cable.
the Juicer will not start and when pressing the cone, both button LED's are flashing.	The cover is not in position.	Make sure the marks at the front of the cover and lower bowl are aligned.
the Juicer stops or the main body feels hot.	Motor overheated. the Juicer is protected by an integrated thermal cut-out protection.	Unplug the Juicer and let cool down. It varies at different environment temperatures how long the machine needs to cool down (from 30 minutes to 120 minutes).
the Juicer stops. the Juicer stops while pressing.	the Juicer is provided with a feature keeping a certain distance between press cup and cone. Pressing with force and with a very thin orange skin, can make the Juicer stall.	<ul style="list-style-type: none">• Do not use force when pressing.• Use fresh press oranges.• Release the lever and press again.
the Juicer leaks.	<ul style="list-style-type: none">• Drip stop is closed.• The centrifuge is full.• The holes in the centrifuge are blocked by (dry) remains.	<ul style="list-style-type: none">• Open the drip stop.• Clean the centrifuge regularly and promptly after every use.• Let the centrifuge soak in warm water and clean carefully with a soft brush. For any other reason why the centrifuge does not operate properly contact an authorised Espressions service centre.
Power cord is very short.	The power cord is stuck in the storage.	<ul style="list-style-type: none">• Push cord completely back into storage and pull it out again (try several times).• Pull with some force to release knot.• Twist the cord and push back before pulling out again (try to twist both ways).

If there is any other reason, why the Juicer does not operate correctly. Please contact an authorised Espressions service centre.

Technical specifications

Note The ratings below are for reference only. The technical specifications can be found at the rating plate under the Juicer. Always use your appliance from a power outlet of the same voltage marked on the appliance.

Power supply voltage	230-240 V
Frequency	50 Hz
Nominal power	340 W
Standby power	0,35 W
Speed	1400 rpm
Sound	65 dBA at 1 m
Height of spout and drip stop (maximum size of glass or jug)	145 mm

Product dimensions:

Height	385 mm
Width	185 mm
Depth	300 mm (with drip tray)
Weight	7,4 kg

Environmental safe recycling



This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Terms of guarantee

This ESPRESSIONS kitchen appliance has been made to a very high degree of excellence in quality and design. However, should there be, within the guarantee period, any defects found in the materials or in the operation, and if we feel it is appropriate, we will replace the defective parts or effect repairs in accordance with the terms of guarantee stated below. This 5-year guarantee applies to parts as well as the costs of labour only in the case of domestic use. Postage costs are not included.

The guarantee does not apply to any plugs, electric leads or fuses, and also does not apply to any defects resulting from:

- Normal wear and tear of the appliance or parts in respect of use.
- Failure to follow the instructions for use in respect of use or maintenance.
- Connecting the product to a power source not suitable to the purpose.
- Damaged caused by incorrect use or misuse of the product.
- Any modifications made to the product by anyone else other than the service personnel authorized by Espressions.
- The dismantling of or any other interference with the product.
- Theft or attempt of theft of the product.
- Breakages or defects resulting from transport.

Before you return this product under the terms of this guarantee, please make sure:

- That you have followed the instructions for this product properly.
- That the power supply to the equipment is working and that you have plugged in the appliance.
- That the defect is not a result of a faulty use.

If you wish to make a claim under the terms of this guarantee, then please:

- Return the product by post or transport services to the dealer from whom the product was purchased or directly to Espressions.
- Ensure that the product is clean and carefully and suitably packed for transportation, preferably in its original packing.
- Enclose information in respect of your contact details (name, address telephone number) and where and when the product was purchased, together with a copy of the receipt.
- Describe the exact nature of the defect.

This guarantee does not cover any other claims whatsoever, including and without any exception, any liability for additional, indirect or resulting damage. It also does not cover any costs for modifications or repairs carried out by third parties without the express permission of Espressions. If any part of or the whole appliance is replaced, the guarantee period will not be extended. The original date of purchase shall still apply as the commencement of the guarantee period.

For more information please contact your local dealer or check at **theJuicer.eu**

Two types of orange juice
at the touch of a button.



the Juicer by Espressions
theJuicer.eu